

160GLC Excavator Repair

(PIN: 1FF160GX__F055671—)

REPAIR TECHNICAL MANUAL 160GLC Excavator (PIN: 1FF160GX_ _F055671—)

TM13349X19 14MAR19 (ENGLISH)

**Worldwide Construction
And Forestry Division**
PRINTED IN U.S.A.

Introduction

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When this symbol is seen on the machine or in this manual, be alert for the potential of personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and test sections help to quickly identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

MM16284,00026ED -19-17SEP18-1/1

Manual Identification—READ THIS FIRST!

IMPORTANT: Use only supporting manuals designated for each specific machine. If incorrect manual is chosen, improper service may occur. Verify product identification number (PIN) when choosing the correct manual.

 
Choosing the Correct Supporting Manuals

John Deere excavators are available in different machine configurations based on the various markets into which they are sold. Different supporting manuals exist for different machine configurations.

When necessary, product identification numbers are listed on the front covers of excavator manuals. These numbers are used to identify the correct supporting manual for the machine.

Product Identification Number

The product identification number (PIN) plate (1) is located on the front right corner of the cab. Each machine has a 17-character PIN (2) shown on PIN plate.

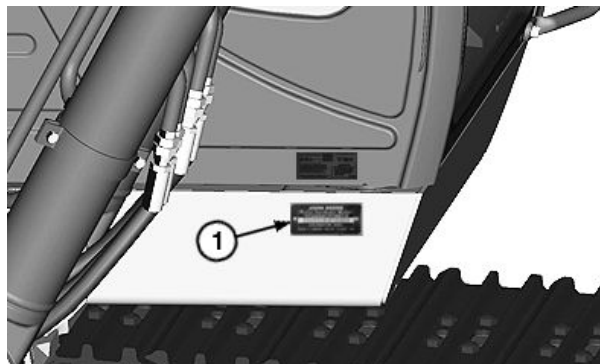

PIN Plate Location



Example of PIN Plate

1— PIN Plate

2— 17-Character PIN

TX1156411 —UN—27MAR14

TX1198261 —UN—27JUL15

Introduction

The PIN identifies the producing factory, machine model number, machine option, year of manufacture, engine emission level, and machine serial number.

The following is an example for a machine that meets Final Tier 4 and Stage IV emission levels:

17-Character PIN Example																
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	F	F	1	6	0	G	X	—	—	F	0	5	5	6	7	1

- **(1—3) World Code:** Identifies location where machine is manufactured.

1FF **World Code** (manufacturing location)

1DW Davenport Works

1T8 Thibodaux Works

1T0 Dubuque Works

1FF Deere—Hitachi (Kernersville, NC, USA)

1F9 Deere—Hitachi (Indaiatuba, São Paulo, Brazil)

- **(4—8) Machine Model Identifier:** Identifies model number.

160G **Machine Model Identifier**

NOTE: Characters 7—8 identify series and major machine configuration options. These characters will change from one machine to another.

X **Machine Option Code**

X Base Machine

R HYEX Military Excavators

- **(9) Check Letter:** This is a random character assigned by the factory. This is not used in machine identification.

— **Check Letter** (variable)

- **(10) Manufacturing Year Code:** Identifies year of machine manufacture.

— **Manufacturing Year Code** (variable)

D 2013

E 2014

F 2015

G 2016

H 2017

I 2018

- **(11) Engine Emission Code:** Represents engine emission certification.

F **Engine Emission Code**

C Tier 2 and Stage II

D Tier 3 and Stage III A

E Interim Tier 4 and Stage III B

F Final Tier 4 and Stage IV

G Interim Tier 4 and Stage III A (19-56 kW)

H Final Tier 4 and Stage III A (19-37 kW)

J Final Tier 4 and Stage III B (37-56 kW)

K Final Tier 4 (8-19 kW)

- **(12—17) Machine Serial Number:** Identifies machine serial number. This character will change from one machine to another.

055671 **Machine Serial Number**

KR46761,0000F3D -19-18DEC17-2/2

Contents

Section 00—General Information

- Group 0001—Safety
- Group 0003—Torque Values

Section 01—Tracks

- Group 0130—Track System

Section 02—Axles, Differentials, and Suspension Systems

- Group 0250—Axle Shaft, Bearings, and Reduction Gears
- Group 0260—Hydraulic System

Section 04—Engine

- Group 0400—Removal and Installation

Section 05—Engine Auxiliary System

- Group 0510—Cooling Systems
- Group 0530—External Exhaust Systems
- Group 0560—External Fuel Supply Systems

Section 07—Damper Drive (Flex Coupling)

- Group 0752—Elements

Section 17—Frame or Supporting Structure

- Group 1740—Frame Installation
- Group 1749—Chassis Weights

Section 18—Operator's Station

- Group 1800—Removal and Installation
- Group 1810—Operator Enclosure
- Group 1821—Seat and Seat Belt
- Group 1830—Heating and Air Conditioning

Section 19—Sheet Metal and Styling

- Group 1910—Hood or Engine Enclosure

Section 33—Excavator

- Group 3302—Buckets
- Group 3340—Frames
- Group 3360—Hydraulic System

Section 43—Swing or Pivoting System

- Group 4350—Mechanical Drive Elements
- Group 4360—Hydraulic System

Section 99—Dealer Fabricated Tools

- Group 9900—Dealer Fabricated Tools

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2019
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2017, 2018

Contents

Section 00 General Information

Contents

	Page		Page
Group 0001—Safety			
Recognize Safety Information	00-0001-1	Clean Exhaust Filter Safely	00-0001-16
Follow Safety Instructions.....	00-0001-1	Group 0003—Torque Values	
Operate Only If Qualified	00-0001-1	Torque Value	
Wear Protective Equipment.....	00-0001-2	Metric Bolt and Cap Screw.....	00-0003-1
Avoid Unauthorized Machine		Additional Metric Cap Screw	
Modifications.....	00-0001-2	Torque Values.....	00-0003-2
Control Pattern Selector—If		Unified Inch Bolt and Cap Screw	00-0003-3
Equipped	00-0001-2	Service Recommendations for	
Add Cab Guarding for Special		37° Flare and 30° Cone Seat	
Uses	00-0001-2	Connectors	00-0003-4
Inspect Machine	00-0001-3	Service Recommendations for	
Stay Clear of Moving Parts.....	00-0001-3	O-Ring Boss Fittings.....	00-0003-4
Avoid High-Pressure Fluids	00-0001-3	Service Recommendations for	
Avoid High-Pressure Oils	00-0001-4	Flared Connections—Straight or	
Work In Ventilated Area.....	00-0001-4	Tapered Threads	00-0003-6
Avoid Static Electricity Risk When		Service Recommendations for Flat	
Refueling	00-0001-5	Face O-Ring Seal Fittings	00-0003-7
Prevent Fires	00-0001-5	Service Recommendation	
In Case of Machine Fire	00-0001-6	O-Ring Boss Fittings In Aluminum HousingExcava-	
Prevent Battery Explosions	00-0001-6	tors.....	00-0003-8
Handle Chemical Products Safely.....	00-0001-6	O-Ring Face Seal Fittings with SAE Inch Hex Nut and	
Handle Starting Fluid Safely	00-0001-7	Stud End for High Pressure.....	00-0003-10
Decommissioning — Proper		O-Ring Face Seal Fittings with Metric Hex Nut and	
Recycling and Disposal of Fluids		Stud End for Standard Pressure.....	00-0003-12
and Components	00-0001-7	O-Ring Face Seal Fittings with Metric Hex Nut and	
Exhaust Filter Ash Handling and		Stud End for High Pressure.....	00-0003-14
Disposal.....	00-0001-7	Service Recommendations for	
Prepare for Emergencies.....	00-0001-8	Metric Series Four Bolt Flange	
Clean Debris from Machine	00-0001-8	Fitting.....	00-0003-16
Use Steps and Handholds		Service Recommendations For	
Correctly	00-0001-8	Inch Series Four Bolt Flange	
Start Only From Operator's Seat	00-0001-8	Fittings.....	00-0003-17
Use and Maintain Seat Belt.....	00-0001-9	Inch Series Four Bolt Flange For High	
Prevent Unintended Machine		Pressure	00-0003-18
Movement.....	00-0001-9	Service Recommendations	
Avoid Work Site Hazards.....	00-0001-10	For Non-Restricted Banjo	
Keep Riders Off Machine	00-0001-10	(Adjustable) Fittings.....	00-0003-19
Avoid Backover Accidents	00-0001-11	Service Recommendations For	
Inspect and Maintain ROPS	00-0001-11	O-Ring Boss Fittings With	
Avoid Machine Tip Over	00-0001-12	Shoulder	00-0003-20
Use Special Care When Lifting		Metric 24 O-Ring Seal DIN 20078.....	00-0003-22
Objects	00-0001-12		
Travel Safely.....	00-0001-13		
Prevent Acid Burns.....	00-0001-13		
Add and Operate Attachments			
Safely.....	00-0001-13		
Park and Prepare for Service			
Safely.....	00-0001-14		
Service Cooling System Safely	00-0001-14		
Remove Paint Before Welding or			
Heating	00-0001-15		
Make Welding Repairs Safely	00-0001-15		
Drive Metal Pins Safely	00-0001-15		

Contents

Recognize Safety Information

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert for the potential of personal injury.

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On your machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



T133555 —UN—15APR13

T133588 —19—28AUG00

TX,RECOGNIZE -19-28JUN10-1/1

Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Use this operator's manual for correct safety sign placement. Be sure that new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine could impair the function or safety and affect machine life.



If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

TS201 —UN—15APR13

TX,FOLLOW -19-20JAN11-1/1

Operate Only If Qualified

Do not operate this machine unless the operator's manual has been read carefully, and you have been qualified by supervised training and instruction.

Operator should be familiar with the job site and surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to every work situation and work site.

TX,QUALIFIED -19-18JAN11-1/1

 
Wear Protective Equipment

Guard against injury from flying pieces or metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises. Radio or music headphones are not suitable to use for hearing protection.

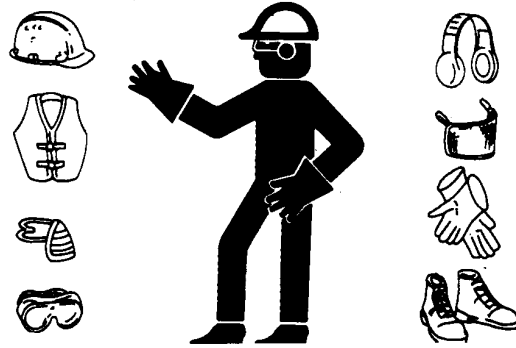

TS206—UN—15APR13

TX,WEAR,PE -19-22SEP10-1/1

Avoid Unauthorized Machine Modifications

John Deere recommends using only genuine John Deere replacement parts to ensure machine performance. Never substitute genuine John Deere parts with alternate parts not intended for the application as these can create hazardous situations or hazardous performance. Non-John Deere parts, or any damage or failures resulting from their use are not covered by any John Deere warranty.

Modifications of this machine, or addition of unapproved products or attachments, may affect machine stability or

reliability, and may create a hazard for the operator or others near the machine. The installer of any modification which may affect the electronic controls of this machine is responsible for establishing that the modification does not adversely affect the machine or its performance.

Always contact an authorized dealer before making machine modifications that change the intended use, weight or balance of the machine, or that alter machine controls, performance or reliability.

AM40430,00000A9 -19-20AUG09-1/1

Control Pattern Selector—If Equipped

This machine may be equipped with a control pattern selector valve. Ensure all bystanders are clear of machine

and area is large enough to operate machine functions. Verify the machine response to each control movement.

DB84312,00000A5 -19-07JUL15-1/1

Add Cab Guarding for Special Uses

Special work situations or machine attachments could create an environment with falling or flying objects. Working near an overhead bank, demolition work, using a hydraulic hammer or winch, working in a forestry application or wooded area, or working in a waste management application, for example, could require added guarding to protect the operator.

Additional level II FOPS (falling object protective structure), forestry protection packages, and special screens or guarding should be installed when falling or flying objects could enter or damage the machine. A rear screen should always be used with a winch to protect against a snapping cable. Before operating in any special work environments, follow the operator protection recommendations of the manufacturer of any specialized attachment or equipment. Contact your authorized John Deere dealer for information on protective guarding.

TX,CABGUARD -19-12FEB13-1/1

Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T6607AQ —UN—15APR13

 
TX,INSPECT -19-08SEP10-1/1

Stay Clear of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting, or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

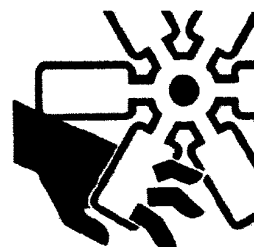

T133592 —UN—15APR13

TX,MOVING,PARTS -19-20JAN11-1/1

 
Avoid High-Pressure Fluids

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

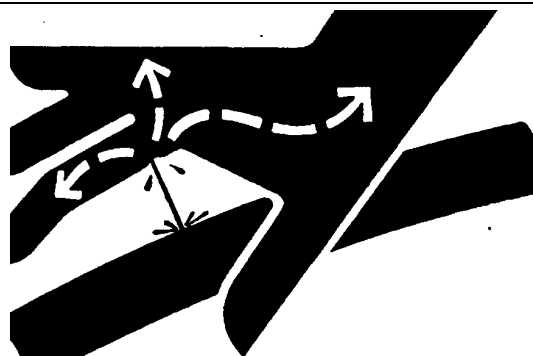

X9811 —UN—23AUG88

 
DX,FLUID -19-06OCT16-1/1

Avoid High-Pressure Oils

This machine uses a high-pressure hydraulic system. Escaping oil under pressure can penetrate the skin causing serious injury.

Never search for leaks with your hands. Protect hands. Use a piece of cardboard to find location of escaping oil. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

If hydraulic oil penetrates your skin, see a doctor immediately. Injected oil must be removed surgically within hours or gangrene could result. Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.

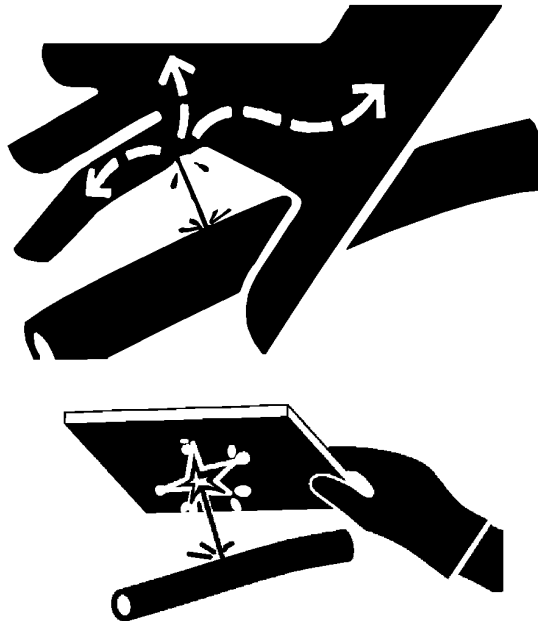

T133509—UN—15APR13

 
T133840—UN—20SEP00

TX,HPOILS -19-20JAN11-1/1

Work In Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

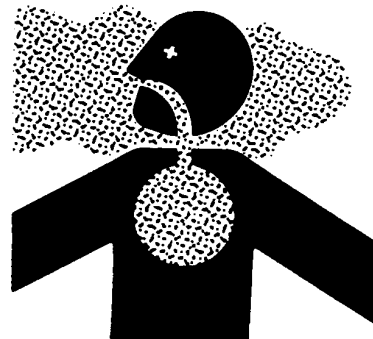

TS220—UN—15APR13

DX,AIR -19-17FEB99-1/1

Avoid Work Site Hazards

Avoid contact with gas lines, buried cables, and water lines. Call utility line location services to identify all underground utilities before digging.

 
Prepare work site properly. Avoid operating near structures or objects that could fall onto the machine. Clear away debris that could move unexpectedly if run over.

Avoid boom or arm contact with overhead obstacles or overhead electrical lines. Never move any part of machine or load closer than 3 m (10 ft) plus twice the line insulator length to overhead wires.


Keep bystanders clear at all times. Keep bystanders away from raised booms, attachments, and unsupported loads. Avoid swinging or raising booms, attachments, or loads over or near bystanders. Use barricades or a signal person to keep vehicles and pedestrians away. Use a signal person if moving machine in congested areas or where visibility is restricted. Always keep signal person in view. Coordinate hand signals before starting machine.

Operate only on solid footing with strength sufficient to support machine. When working close to an excavation, position travel motors away from the hole.

Reduce machine speed when operating with tool on or near ground when obstacles may be hidden (e.g., during snow removal or clearing mud, dirt, etc). At high speeds, hitting obstacles (rocks, uneven concrete, or manholes) can cause a sudden stop. Always wear seat belt.

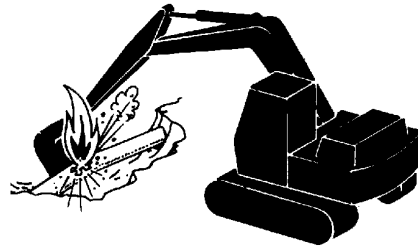

Work Site Hazards

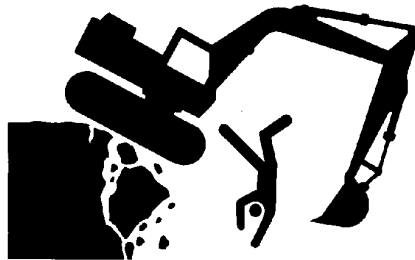 

Work Site Hazards

T134986—UN—31OCT00

T133650—UN—27SEP00

T133549—UN—24AUG00

 
TX03679,0001748 -19-08JUL15-1/1

Keep Riders Off Machine

Only allow operator on machine.

Riders are subject to injury. They may fall from machine, be caught between machine parts, or be struck by foreign objects.

Riders may obstruct operator's view or impair the ability to operate machine safely.

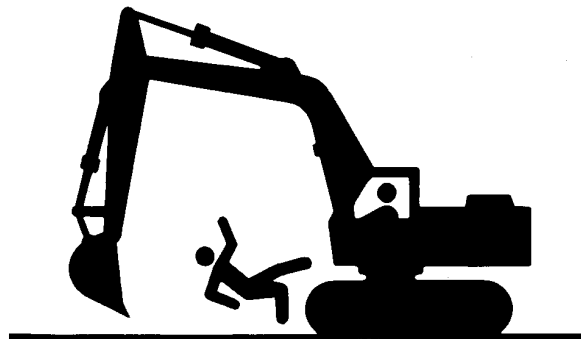

Keep Riders Off Machine

T7273AH—UN—08JUN90

TX03679,0001726 -19-30JUN16-1/1

Click on the image link below for the full version of the service manual

