 


John Deere 550B Crawler Dozer and 555B Crawler Loader

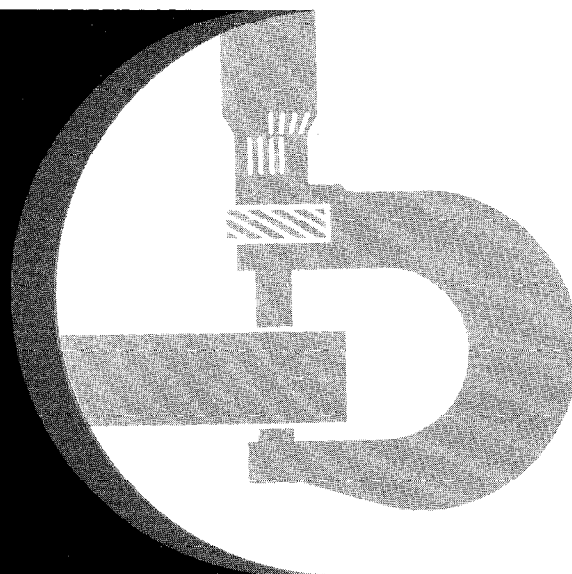

TECHNICAL MANUAL

TM-1331 (Aug-87)

LITHO IN U.S.A.

550B CRAWLER DOZER AND 555B CRAWLER LOADER TECHNICAL MANUAL TM-1331 (AUG-87)

SECTION AND GROUP CONTENTS

SECTION I - GENERAL INFORMATION

- Group I - Introduction and Safety Information
- Group II - General Specifications
- Group III - Torque Specifications Chart
for Cap Screws and Hydraulic
Fittings
- Group IV - Lubrication

SECTION 01 - TRACKS

- Group 0130 - Track Systems
Track Chain, Track frame, Track Carrier
Roller, Front Idler, Track Roller and Track
Adjuster

SECTION 02 - AXLES AND SUSPENSION SYSTEMS

- Group 0250 - Axle Shaft, Bearings, and Reduction Gears
Final Drive, Steering Clutch, Brake Band,
Steering Clutch Housing and Linkage

SECTION 03 - TRANSMISSION

- Group 0315 - Controls
- Group 0350 - Gears, Shafts, Bearings, Power
Shift Clutch, and Torque Converter
- Group 0360 - Hydraulic System
Oil Pump, Transmission Control Valve,
Selector Valve, Oil Filter

SECTION 04 - ENGINE

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating
Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block (Liners)
- Group 0407 - Engine Oiling System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0415 - Engine Balancer
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housing and Piping
- Group 0419 - Engine Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting System
- Group 0433 - Flywheel, Housing and Fasteners

SECTION 05 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0560 - External Fuel Supply Systems

SECTION 06 - TORQUE CONVERTER

- Group 0651 - Converter, Turbine, Gears, and
Shafts (See Group 0350)

Continued on next page



T64;1331 16 310787

SECTION AND GROUP CONTENTS - Continued

SECTION 09 - STEERING SYSTEMS

Group 0960 - Power Steering

SECTION 15 - EQUIPMENT ATTACHING

Group 1511 - Drawbar

SECTION 16 - ELECTRICAL SYSTEM

Group 1671 - Batteries, Support, and Cables

Group 1672 - Alternator

Group 1674 - Wiring Harness and Switches

Group 1676 - Instruments and Indicators

SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

Group 1740 - Frame Installation

Group 1746 - Frame Bottom Guards

Group 1749 - Chassis Weights

Sprocket, Rear, and Bottom Counterweights

SECTION 18 - OPERATOR'S STATION

Group 1810 - Operator Enclosure

ROPS, Cab, Windshield Wiper Motor,

Operator Seat, and Backhoe Seat

SECTION 19 - SHEET METAL

Group 1910 - Hood or Engine Enclosure

Grille and Grille Housing, Engine Side

Shields, Cowl and Cowl Support

SECTION 30 - WINCH

Group 3015 - Controls Linkage

Group 3050 - Winch Drive and Clutches

Group 3060 - Winch Hydraulic System

Winch Control Valve and Hydraulic Pump

SECTION 31 - LOADER

Group 3102 - Buckets

Group 3103 - Forks

Group 3115 - Controls Linkage

Group 3140 - Frames

Group 3160 - Hydraulic System

Loader Cylinders, Hydraulic Pump and

Loader Control Valve

SECTION 32 - BULLDOZER

Group 3201 - Blades

Group 3215 - Controls Linkage

Group 3240 - Frames

Group 3260 - Hydraulic System

Hydraulic Return Filter, Reservoir, Pump,
Pump Drive, Dozer Control Valve, Auxiliary
Valve, Selector Valve, Flow Divider and
Bulldozer Cylinders

SECTION 33A - BACKHOE - 9300

Group 3300A - Removal and Installation

Group 3302A - Bucket

Group 3315A - Controls Linkage

Group 3340A - Frames

Group 3360A - Hydraulic System

Control Valve, lift Check, Anti-Cavitation
Valve, Relief Valve, Manifold Block and
Backhoe Cylinders

SECTION 33B - BACKHOE - 9550

Group 3300B - Removal and Installation

Group 3302B - Bucket

Group 3315B - Controls Linkage

Group 3340B - Frames

Group 3360B - Hydraulic System

Control Valve, Lift Check, Anti-cavitation
Valve, Relief Valve, Manifold Block and
Backhoe Cylinders

SECTION 37 - LOG ARCH

Group 3740 - Arch Frames

SECTION 40 - WINCH DRIVE

Group 4051 - Gears, Shafts and Bearings

SECTION 42 - GROUND CONDITIONING TOOL

Group 4201 - Teeth and Shanks

Group 4240 - Frame

Group 4260 - Hydraulic System

SECTION 9005 - OPERATIONAL CHECK-OUT PROCEDURE

SECTION 9010 - ENGINE

Group 9010-05 - Theory of Operation

Group 9010-10 - System Operational Checks

Group 9010-15 - Diagnostic Information

Group 9010-20 - Adjustments

Group 9010-25 - Tests

Continued on next page

T64:1331 17 121185

SECTION AND GROUP CONTENTS—Continued

SECTION 9015 - ELECTRICAL SYSTEM

- Group 9015-05 - Theory of Operation
- Group 9015-10 - System Operational Checks
- Group 9015-15 - Diagnostic Information
- Group 9015-25 - Tests

SECTION 9020 - POWER TRAIN

- Group 9020-05 - Theory of Operation
- Group 9020-10 - System Operational Checks
- Group 9020-15 - Diagnostic Information
- Group 9020-20 - Adjustments
- Group 9020-25 - Tests

SECTION 9025 - HYDRAULIC SYSTEM

- Group 9025-05 - Theory of Operation
- Group 9025-10 - System Operational Checks
- Group 9025-15 - Diagnostic Information
- Group 9025-25 - Tests

SECTION 9030 - MISCELLANEOUS COMPONENTS

- Group 9030-05 - Theory of Operation
- Group 9030-15 - Diagnostic Information
- Group 9030-20 - Adjustments
- Group 9030-25 - Tests

SECTION 99 - DEALER FABRICATED TOOLS

INTRODUCTION

This technical manual is part of a twin concept of service.

 
FOS Manuals - for reference

Technical Manuals - for actual service

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise service guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

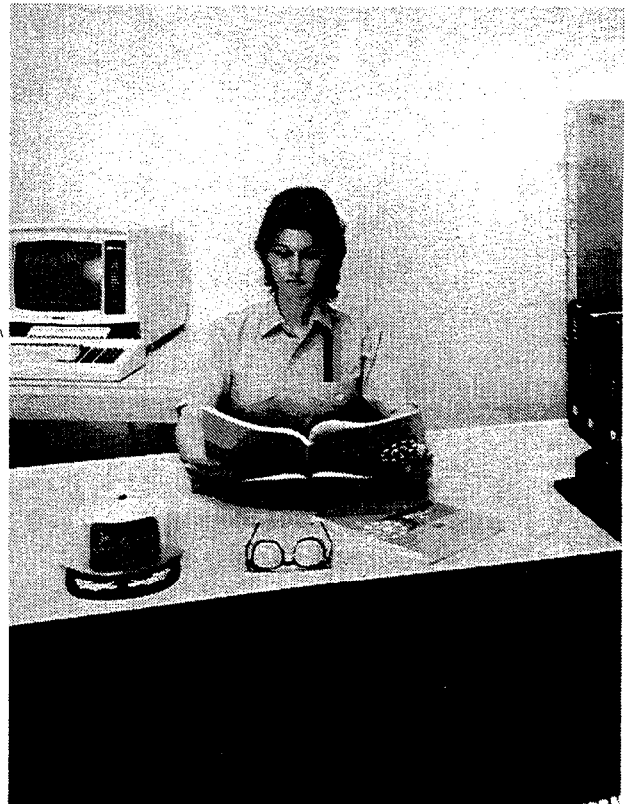


1TA;T5884BB, T82;SKPD HC 140984

FEATURES OF THIS TECHNICAL MANUAL

- John Deere ILLUSTRATION format emphasizing detailed pictures and fewer words in easy-to-use modules.
- Removal and installation groups preceding some repair groups.
- A section of system diagnostic testing.
- Table of contents of all sections at the front of the manual and a listing of all groups and headings at the front of each section.
- Essential tools and specifications listed at the front of each group they are used in.
- Essential tools illustrated in numerical order at end of manual.
- Alphabetical listing of all major components, specifications, and essential tools.
- Safety rules, general specifications, and lubrication specifications.

This technical manual was planned and written for you - an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it when you need to know correct service procedures or specifications.

 Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.

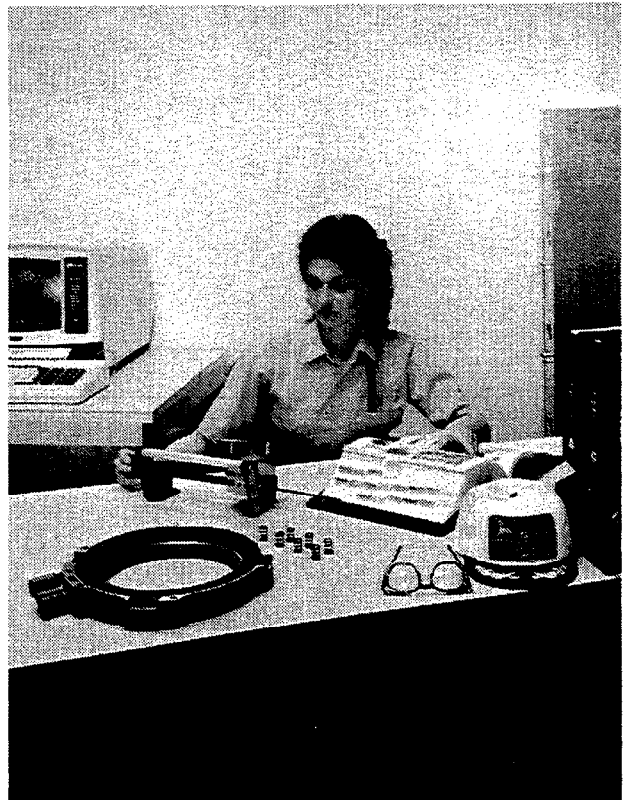


1TA;T5884BC T82;SKPD HD 140984

USING TABS

To fully utilize this technical manual, you must understand how it is organized.

Only two tab colors are used—gray and yellow. Each color represents a different type of information.

 Spend a minute reading this now and save many minutes of searching later.

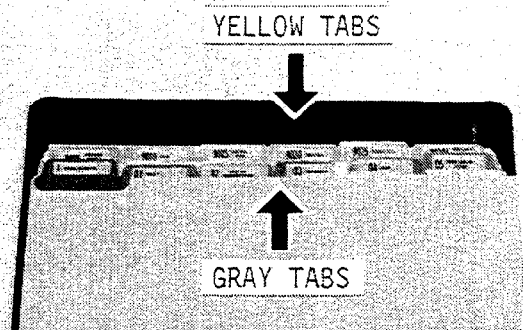


1TA;T5933AB T82;SKPD HE 120984

GRAY TAB SECTIONS

The gray tab sections are repair sections that tell how to repair the components of the various systems.

Repair of a component includes:

 - Removal from machine (when necessary)
- Disassembly
- Inspection
- Replacement of parts
- Assembly
- Adjustment
- Installation on machine (when necessary)

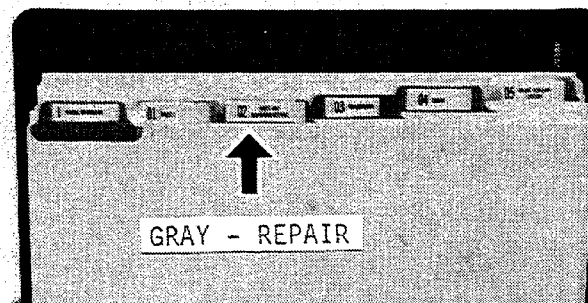

The numbers used for the repair (gray tab) sections are part of an overall service publication numbering system. The numbers identify the same sections in the parts catalog, flat rate manual, service information bulletins, and service training courses.


1TA;T5933AC T82;SKPD HF 120984

YELLOW TAB SECTIONS

Each yellow tab section contains information on:

Groups

- | | |
|----|-------------------------------|
| 05 | Theory of Operation |
| 10 | System Operational Checks |
| 15 | System Diagnostic Information |
| 20 | Adjustments |
| 25 | Tests |

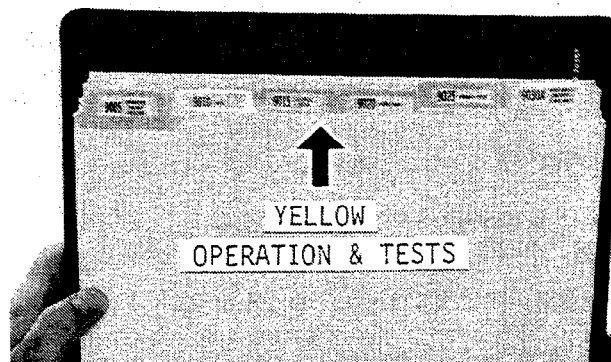 


1TA;T5933AD T82;SKPD HG 190984

TAB POSITIONS

Each gray tab and its corresponding yellow tab have the same tab position. This is to help you quickly locate the related information.


Tab Color	Tab Position	Section No.	Description
Gray	4th	03	Transmission Repair
Yellow	4th	9020	Power Train Operation and Tests

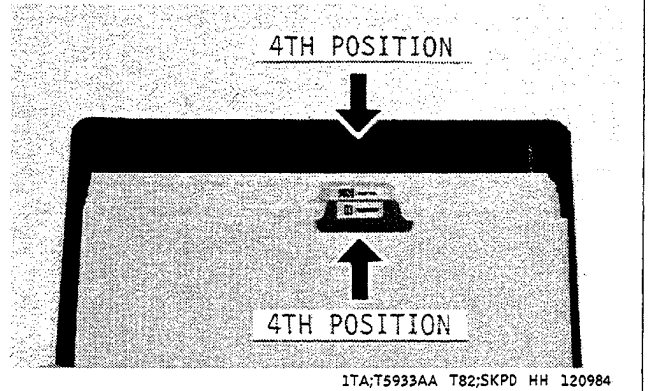 

THREE-STEP PROCEDURE

Use the following three-step procedure to locate the desired information.

 1. Determine the type of information you need. Is it repair, operation, or tests?
2. Go to the appropriate section tab:
Gray for Repair
Yellow for Operation or Tests

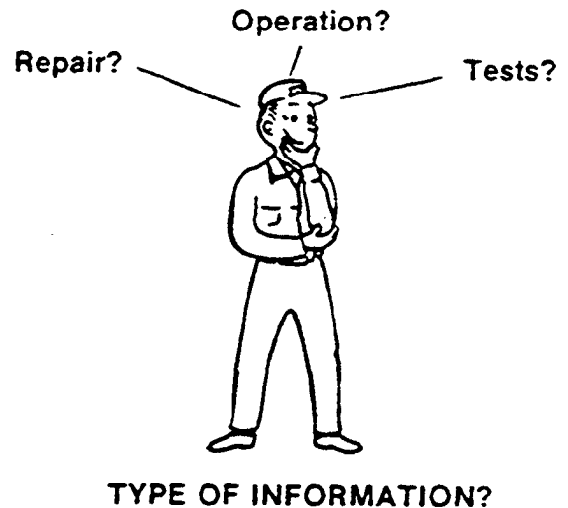

1TA;T5940AT T82;SKPD HI 120984

Click on the image link below for the full version of the service manual

