

John Deere JD444 Loader



TECHNICAL MANUAL

TM1162
LITHO IN U.S.A. (REVISED)

JD444 LOADER

Technical Manual
TM-1162 (Nov-76)

SECTIONAL CONTENTS OF THIS MANUAL

Section I - General Information _____	I
Section 1 - Wheels (Tracks) _____	1
Section 2 - Axles and Suspension System _____	2
Section 3 - Transmission _____	3
Section 4 - Engine _____	4
Section 5 - Engine Auxiliary Systems _____	5
Section 6 - Torque Converter _____	6
Section 7 - Traction (Engine) Clutch _____	NOT USED 7
Section 8 - Transfer Drive _____	NOT USED 8
Section 9 - Steering Systems _____	9
Section 10 - Service Brakes _____	10
Section 11 - Parking - Emergency Brakes _____	11
Section 13 - Miscellaneous Vehicle _____	NOT USED 13
Section 15 - Equipment Attaching _____	NOT USED 15

Continued on page 3

Copyright © 1976
DEERE & COMPANY
Moline, Illinois
All Rights Reserved

SECTIONAL CONTENTS (Continued)

Section 16 - Electrical Systems _____	16
Section 17 - Frame, Chassis or Supporting Structure _____	17
Section 18 - Operator's Station _____	18
Section 19 - Sheet Metal and Styling _____	19
Section 20 - Safety, Convenience and Miscellaneous _____	20
Section 21 - Main Hydraulic System _____	21
Section 22 - Pneumatic Systems _____	NOT USED 22
Section 30 - Winch _____	NOT USED 30
Section 31 - Loader _____	31
Section 32 - Bulldozer _____	NOT USED 32
Section 33 - Backhoe and Excavator _____	33
Section 34 - Grading Device _____	NOT USED 34
Section 35 - Scraper and Haulage Device _____	NOT USED 35
Section 36 - Conveyor and Elevating Device _____	NOT USED 36
Section 37 - Arch or Boom, or Cranes _____	NOT USED 37
Section 38 - Grapple _____	NOT USED 38
Section 39 - Shear _____	NOT USED 39

Continued on page 5

SECTIONAL CONTENTS (Continued)

Section 40 - PTO or Winch Drive _____	NOT USED	40
Section 41 - Misc. Function Mechanical Drive _____	NOT USED	41
Section 42 - Ground Conditioning Tool _____	NOT USED	42
Section 43 - Swing, Rotation or Pivoting System _____	NOT USED	43
Section 44 - Cutting Mechanism _____	NOT USED	44
Section 45 - Forklifts _____	NOT USED	45
Section 46 - Automatic Control _____	NOT USED	46
Section 90 - System Testing _____		90

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Lubrication

SECTION 1 - WHEELS

- Group 0110 - Powered Wheels and Fastenings
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shafts and U-Joints
- Group 0250 - Axle Shafts, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0341 - Housings and Covers
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housing and Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust Systems
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

SECTION 6 - TORQUE CONVERTER

- Group 0641 - Housing and Cover
- Group 0651 - Turbine, Gears, Shafts and Bearings
- Group 0699 - Specifications and Special Tools

SECTION 9 - STEERING SYSTEM

- Group 0930 - Emergency Steering
- Group 0960 - Hydraulic System
- Group 0999 - Specifications and Special Tools

SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1060 - Hydraulic System
- Group 1099 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

SECTION AND GROUP CONTENTS OF THIS MANUAL - Continued

SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1799 - Specifications and Special Tools

SECTION 18 - OPERATOR'S STATION

- Group 1807 - Special Noise Control Items
- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1822 - Steps and Handholds
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing
- Group 1927 - Fenders

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2002 - Mirror
- Group 2004 - Horn
- Group 2006 - Cigar Lighter

SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

SECTION 31 - LOADER

- Group 3102 - Buckets
- Group 3115 - Controls Linkage
- Group 3140 - Frames
- Group 3160 - Hydraulic System
- Group 3199 - Specifications and Special Tools

SECTION 33 - BACKHOE AND EXCAVATOR

- Group 3301 - Blades, Teeth and Shanks
- Group 3302 - Buckets
- Group 3315 - Controls Linkage
- Group 3321 - Seat
- Group 3340 - Frames
- Group 3360 - Hydraulic System
- Group 3399 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Diagnosis and Testing
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9025A - Hydraulic System (Analyzer)
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

ALPHABETICAL INDEX

A

Accumulator, brake	1060-4
Accumulator, steering	0930-3
After-sale inspection	I-IV-16
Air cleaner	0520-1
Air conditioning system	1830-3
Air conditioning system testing	9031-5
Diagnosing malfunctions	9031-8
Precautions	9031-11
System service	9031-12
Visual checks	9031-7
Air intake system	0414-1
Air restriction indicator	1676-3
Alarm, reverse warning	2004-2
Alternator (Delco-Remy)	1672-1
Alternator (Motorola)	1672-8
Analyzer testing	9025A-1
Axle, front	0201-3
Axle, rear	0201-3

B

Backhoe	3301-1
Batteries	1671-3
Bearings, main	0401-2
Block, cylinder	0404-1
Boom cylinder, backhoe	3360-9
Boom cylinder, loader	3160-16
Boom valve, backhoe	3360-5
Boom valve, loader	3160-9
Boom raise circuit	1675-1
Bottom guards, frame	1746-1
Brakes, parking-emergency	1111-3
Brakes, service	1011-3
Break-in, engine	0499-1
Bucket cylinder, backhoe	3360-8
Bucket cylinder, loader	3160-16
Bucket valve, backhoe	3360-4
Bucket valve, loader	3160-10
Buckets, backhoe	3301-1
Buckets, loader	3102-3

C

Cab	1810-6
Camshaft and valve actuating means	0402-1
Canopy	1810-1

Charging system	9015-25
Checking and adding compressor oil	1830-14
Cigar lighter	2006-1
Circuit breakers	1674-2
Circuit boom raise	1675-1
Circuit, return-to-dig	1675-1
Clutch coil and housing, compressor	1830-13
Clutch control valve	0360-6
Clutch, powershift	0350-1
Compressor	1830-3
Compressor hub and drive plate assembly	1830-6
Compressor pulley and bearings	1830-12
Compressor servicing	1830-15
Compressor shaft seal	1830-8
Condenser	1830-18
Connecting rods	0403-1
Control valve, backhoe	3360-1
Control valve, loader	3160-3
Cooler, engine oil	0419-1
Crankshaft	0401-1
Cylinder block	0404-1
Cylinder head	0409-1
Cylinder liner	0404-3
Cylinder, steering	0960-11
Cylinders, backhoe	3360-7
Cylinders, hydraulic	3160-15

D

Damper assembly	0350-1
Defroster	1810-12
Deglazing cylinder liners	0404-3
Delivery service	I-IV-16
Diagnosis and testing	9005-3
Differential, no-spin	0210-6
Differential, standard	0210-1
Dipstick nipple	0407-4
Disconnect shifter and linkage	0315-5
Drawbar	1740-8
Drive axle housing and support	0201-3

E

Electrical system testing	9015-1
Block diagram	9015-8
Component location	9015-3
Inspection	9015-20
Malfunctions	9015-17
Operation	9015-1
Precautions	9015-19
Schematic diagram	9015-49
Tests	9015-22
Wiring routes	9015-8
Emergency steering accumulator	0930-3
Emergency steering low pressure warning system	0930-5
Engine break-in	0499-1
Engine cooling system	0510-1
Engine frame	1740-3
Engine fuel system	0560-1
Engine lubricating system	0407-1
Engine oil pressure adjustment	9010-11
Engine oil pressure check	9010-10
Engine oil pressure gauge	1676-3
Engine oil pump	0407-1
Engine removal, installation	0400-5
Engine testing	9010-1
Component locations	9010-2
Malfunctions	9010-5
Speed control linkage adjustment	9010-14
Tests and adjustments	9010-10
Visual inspection	9010-8
Engine water temperature gauge	1676-4
Evaporator	1830-20
Exhaust manifold	0410-1
Exhaust system, engine	0530-1

F

Filter, engine fuel	0420-1
Flywheel	0433-1
Frames, loader	3140-1
Fuel filter, engine	0420-1
Fuel gauge	1676-4
Fuel injection nozzles	0413-5
Fuel injection pump	0413-1
Fuel system	0560-1
Fuel tank	0560-1
Fuel transfer pump	0421-1
Fuses	1674-2

G

Gauge, engine oil pressure	1676-3
Gauge, engine water temperature	1676-4
Gauge, fuel	1676-4
Gauge, transmission oil pressure	1676-2
Gauge, transmission oil temperature	1676-2
Greases	I-V-2
Grille and grille housing	1921-1
Guard, splash	1927-1

H

Handholds	1822-1
Heater	1830-1
Heating system testing	9031-1
Heavy-duty bucket	3301-3
Hood	1910-4
Horn	2004-1
Hour meter	1676-5
Hydraulic oil indicator light and switch	1676-6
Hydraulic system (analyzer) testing	9025A-1
Hydraulic system pretest check sheet	9025A-4
Loader hydraulic system tests	9025A-8
Operational checks	9025A-3
Parts list for tests	9025A-27
Pretest inspection	9025A-3
Steering and brake system tests	9025A-14
Symptom index	9025A-5
Hydraulic system (flow meter) testing	9025-1
Component location	9025-1
Diagnosing malfunctions	9025-17
Operations	9025-5
Testing and adjustments	9025-25
Visual inspection	9025-25

I

Injection nozzles, fuel	0413-5
Injection pump, fuel	0413-1
Inspection, after-sale	I-IV-16
Instruments and indicators	1676-1
Instruments and indicators testing	9015-31
Intake system, engine	0520-1

L

Leak testing compressor	1830-16
Light circuit testing	9015-30
Light, hydraulic oil indicator	1676-6
Light, parking brake indicator	1676-5
Lighter, cigar	2006-1
Light flashers	1673-2
Light switches	1673-1
Liner, cylinder	0404-1
Loader buckets and boom	3102-3
Loader frame	3140-1
Lubricants	I-V-2
Lubrication system, engine	0407-1

M

Main bearings	0401-2
Malfunctions:	
Air conditioning system	9031-1
Batteries	9015-17
Brake system	9025-18
Charging circuit	9015-17
Clutch control valve	9025-17
Damper assembly	9020-9
Differential	9020-9
Drive shafts	9020-9
Engine	9010-5
Final drives	9020-9
Gauges and switches	9015-18
Hydraulic pump (loader)	9025-23
Hydraulic pump (steering and brakes) ..	9025-19
Lights	9015-18
Loader functions	9025-23
Loader pump	9025-23
Starting circuit	9015-17
Steering and brake hydraulic pump	9025-19
Steering and brake system	9025-18
Steering valve	9025-20
Manifold, exhaust	0410-1
Manifold, water	0418-1
Mechanical instruments and indicators	1676-2
Mirror	2002-3
Miscellaneous accessories circuit testing	9015-33
Miscellaneous components system testing ..	9030-1
Windshield wiper adjustment	9030-1

Mounting frame, engine	0540-1
Muffler	0530-1
Multi-purpose bucket clam cylinder	3160-17

N

Neutral start switch	1674-4
Noise control items	1807-3
No-spin differential	0210-6
Nozzles, fuel injection	0413-5

O

Oil cooler, engine	0419-1
Oil cooler, transmission	0360-9
Oil filter, transmission	0360-8
Oil pan	0407-4
Oiling system, engine	0407-1
Oils	I-V-2
Operator enclosure	1810-1

P

Panel, instrument	1676-1
Parking brake indicator light and switch	1676-5
Parking-emergency brakes	1111-3
Periodic service chart	I-V-1
Pistons	0403-1
Platforms	1810-4
Power shift clutch	0350-1
Power train system testing	9020-1
Block diagram	9020-5
Component location	9020-2
Diagnosing malfunctions	9020-9
Testing and adjustments	9020-11
Powered wheels and fastening	0110-3
Predelivery service	I-IV-1
Pump, engine oil	0407-1
Pump, engine water	0417-1
Pump, fuel injection	0413-1
Pump, fuel transfer	0421-1
Pump, loader hydraulic	3160-1
Pump, main hydraulic	2160-3
Pump, transmission	0360-1

R

Radiator and fan shroud	0510-2
Rear view mirror	2002-3
Rear weights	1740-8
Regulator and alternator	1672-1
Relief valve, backhoe	3360-6
Reservoir and filters, loader	3160-19
Return-to-dig and boom raise circuit testing	9015-35
Return-to-dig circuit	1675-1
Reverse warning alarm	2004-2
ROPS canopy frame	1810-1

S

Safety information	I-II-1
Schematic, electrical system testing	9015-5, 9015-39
Seat	1821-1
Seat, backhoe	3321-1
Seat belt	1821-3
Service brakes	1011-3
Service, delivery	I-IV-16
Service, predelivery	I-IV-1
Shift controls and linkage	0315-3
Side shields, engine	1910-3
Special tools:	
Alternator, regulator and charging system wiring	1699-7
Batteries, support and cables	1699-6
Camshaft and valve actuating means	0499-32
Connecting rods and pistons	0499-34
Crankshaft and main bearings	0499-30
Cylinder block	0499-35
Cylinder head and valves	0499-36
Electrical system testing	9035-11
Engine oiling system	0499-33
Engine removal and installation	0499-28
Engine system testing	9035-3
Flywheel, housing and fastenings	0499-43

Special tools—Continued

Fuel injection system	0499-37
Heating and air conditioning	9035-22
Hydraulic system (analyzer)	9035-19
Hydraulic system (flow meter) system testing	9035-15
Loader hydraulic system	3199-8
Main hydraulic system	2199-7
Oiling System	0499-35
Service brakes hydraulic system	1099-2
Starting motor and fastenings	0499-40
Steering hydraulic system	0999-7
Torque converter turbine, gears, shafts and bearings	0699-4
Turbocharger	0499-38
Transmission gears, shafts, bearings and power shift clutch	0399-9
Transmission housings and covers	0399-8
Water pump	0499-39
Specifications and torque values:	
Air conditioning	1899-3
Alternator, regulator and (Delco-Remy) charging system wiring	1699-1
Alternator, regulator and charging system wiring (Motorola)	1699-2
Axle shafts, bearings, reduction gears	0299-7
Backhoe hydraulic system	3399-1
Boom cylinder	3399-4
Boom valve	3399-3
Bucket cylinder	3399-4
Bucket valve	3399-2
Control valve	3399-3
Crowd cylinder	3399-4
Crowd valve	3399-1
Relief valve	3399-3
Stabilizer cylinder	3399-5
Stabilizer valve	3399-1
Swing cylinder	3399-5
Swing valve	3399-2
Batteries, support and cables	1699-1
Camshaft and valve actuating means	0499-3
Cold weather starting aids	0599-1
Connecting rods and pistons	0499-8
Crankshaft and main bearings	0499-2

Specifications and torque values—Continued

Cylinder block	0499-10
Cylinder head and valves	0499-15
Differential or bevel drive	0299-3
Drive axle housing and support	0299-1
Electrical system testing	9035-6
Emergency steering	0999-1
Engine break-in	0499-1
Engine cooling system	0599-1
Engine mounting frame	0599-3
Engine oil cooler	0499-23
Engine speed controls	0599-2
Engine system testing	9035-1
Flywheel, housing and fastenings	0499-27
Frame installation	1799-1
Fuel injection system	0499-18
General specifications	I-III-1
Heating and air conditioning	9035-21
Hydraulic system (analyzer)	9035-16
Hydraulic system (flow meter) testing	9035-13
Input drive shafts and U-joints	0299-2
Instruments and indicators	1699-5
Lighting system	1699-4
Loader bucket	3199-2
Loader frame	3199-2
Loader hydraulic system	3199-3
Main hydraulic system	2199-1
Miscellaneous components	9035-20
Windshield wiper adjustment	9035-20
Oil cooler	0299-24
Oiling system	0499-13
Operator enclosure	1899-1
Power train system testing	9035-12
Powered wheels and fastenings	0199-1
Service brakes hydraulic system	1099-1
Starting motor and fastenings	0499-25
Steering hydraulic system	0999-1
Thermostats, housings and water piping	0499-23
Torque converter housing and cover	0699-1
Torque converter turbine, gears, shafts and bearings	0699-3

Specifications and torque values—Continued

Transmission gears, shafts bearings, and power shift clutch	0399-2
Transmission housings and covers	0399-1
Transmission hydraulic system	0399-6
Transmission input drive shafts and U-joints	0399-1
Speed controls, engine	0515-1
Splash guards	1927-1
Stabilizer cylinder	3360-11
Stabilizer valve	3360-4
Start circuit relay	1674-3
Start switch	1674-4
Start switch, neutral	1674-4
Starting aids, cold weather	0505-3
Starting circuit testing	9015-20
Starting motor and fastenings	0422-1
Steering shroud and cowl	1910-5
Steering system	0930-3
Steps	1822-1
Storage, temporary	I-IV-1
Supports, engine	0540-1
Swing cylinder	3360-11
Swing valve	3360-5
Switch, electric horn	2004-1
Switch, emergency steering low pressure warning	0930-5
Switch, hydraulic oil indicator	1676-6
Switch, key	1674-4
Switch, light	1673-1
Switch, neutral start	1674-4
Switch, parking brake indicator	1676-5
Switch, start	1674-4
System controls, electrical	1675-1
System short test	9015-18

T

Tank, engine fuel	0560-1
Teeth and shanks	3301-3

Tires	0110-3
Torque chart	I-IV-15
Torque converter	0641-3
Transmission	0315-3
Transmission control valve	0360-3
Transmission oil filter	0360-8
Transmission pump	0360-1
Transmission oil pressure gauge	1676-2
Transmission oil temperature gauge	1676-2

V

Valve, backhoe control	3360-1
Valve, boom, backhoe	3360-5
Valve, boom, loader	3160-10
Valve, brake	1060-1
Valve, bucket, backhoe	3360-4
Valve, bucket, loader	3160-9
Valve, clutch control	0360-6
Valve, crowd	3360-4
Valve, engine oil pressure	0407-2, 0407-4
Valve, loader control	3160-6
Valve, relief, backhoe	3360-6
Valve, relief, loader	3160-13
Valve, stabilizer	3360-4

Valve, steering	0960-1
Valve, swing	3360-5
Valve, transmission control	0360-3
Ventilating system, engine	0408-1
Voltmeter	1676-5

W

Water manifold	0418-1
Water pump, engine	0417-1
Weight, rear	1740-8
Wheels, powered	0110-3
Windshield wipers	1810-11
Windshield wipers adjustments	9030-1
Wiring harness and switches	1674-1
Circuit breakers	1674-2
Fuses	1674-2
Start circuit relay	1674-3
Switches	1674-4

COMPLETE PAGE LISTING WITH LATEST DATE LINES

Page	Date Line	Page	Date Line	Page	Date Line
I-I-1,2	(Nov-76)	2-0201-5,6	(Nov-76)	3-0399-9,10	(Jan-80)
I-I-3,4	(Nov-76)	2-0210-1,2	(Nov-76)		
I-I-5,6	(Nov-76)	2-0210-3,4	(Nov-76)	4-0400-1,2	(Dec-78)
I-I-7,8	(Nov-76)	2-0210-5,6	(Dec-78)	4-0400-3,4	(Jan-80)
I-I-9,10	(Jan-80)	2-0210-7,8	(Dec-78)	4-0400-5,6	(Jan-80)
I-I-11,12	(Jan-80)	2-0210-9,10	(Dec-78)	4-0400-7,8	(Nov-76)
I-I-13,14	(Jan-80)	2-0210-11,12	(Jan-80)	4-0400-9,10	(Jan-80)
I-I-15,16	(Jan-80)	2-0210-13,14	(Nov-76)	4-0400-11,12	(Nov-76)
I-I-17,18	(Jan-80)	2-0210-15,16	(Jan-80)	4-0401-1,2	(Nov-76)
I-I-19,20*	(Dec-78)	2-0225-1,2	(Nov-76)	4-0401-3,4	(Jan-80)
I-I-21,22*	(Dec-78)	2-0225-3,4	(Nov-76)	4-0401-5,6	(Jan-80)
I-I-23,24*	(Dec-78)	2-0250-1,2	(Nov-76)	4-0402-1,2	(Nov-76)
I-I-25,26*	(Dec-78)	2-0250-3,4	(Nov-76)	4-0402-3,4	(Nov-76)
I-II-1,2	(Nov-76)	2-0299-1,2	(Nov-76)	4-0402-5,6	(Nov-76)
I-II-3,4	(Nov-76)	2-0299-3,4	(Dec-78)	4-0402-7,8	(Nov-76)
I-II-5,6	(Nov-76)	2-0299-5,6	(Jan-80)	4-0403-1,2	(Nov-76)
I-II-7,8	(Nov-76)	2-0299-7,8	(Nov-76)	4-0403-3,4	(Jan-80)
I-III-1,2	(Dec-78)			4-0403-5,6	(Jan-80)
I-III-3,4	(Nov-76)	3-0315-1,2	(Nov-76)	4-0404-1,2	(Nov-76)
I-IV-1,2	(Nov-76)	3-0315-3,4	(Nov-76)	4-0404-3,4	(Nov-76)
I-IV-3,4	(Jan-80)	3-0315-5,6	(Nov-76)	4-0404-5,6	(Nov-76)
I-IV-5,6	(Dec-78)	3-0325-1,2	(Jan-80)	4-0404-7,8	(Nov-76)
I-IV-7,8	(Nov-76)	3-0341-1,2	(Jan-80)	4-0407-1,2	(Jan-80)
I-IV-9,10	(Jan-80)	3-0341-3,4	(Jan-80)	4-0407-3,4	(Jan-80)
I-IV-11,12	(Dec-78)	3-0350-1,2	(Nov-76)	4-0408-1,2	(Nov-76)
I-IV-13,14	(Nov-76)	3-0350-3,4	(Nov-76)	4-0409-1,2	(Jan-80)
I-IV-15,16	(Nov-76)	3-0350-5,6	(Dec-78)	4-0409-3,4	(Jan-80)
I-IV-17,18	(Nov-76)	3-0350-7,8	(Nov-76)	4-0409-5,6	(Jan-80)
I-IV-19,20	(Jan-80)	3-0350-9,10	(Jan-80)	4-0410-1,2	(Nov-76)
I-IV-21,22	(Jan-80)	3-0350-11,12	(Nov-76)	4-0413-1,2	(Jan-80)
I-IV-23,24	(Nov-76)	3-0350-13,14	(Nov-76)	4-0413-3,4	(Jan-80)
I-IV-25,26	(Jan-80)	3-0350-15,16	(Jan-80)	4-0413-5,6	(Nov-76)
I-IV-27,28	(Nov-76)	3-0350-17,18	(Jan-80)	4-0413-7,8	(Nov-76)
I-IV-29,30	(Nov-76)	3-0350-19,20	(Jan-80)	4-0414-1,2	(Jan-80)
I-IV-31,32	(Dec-78)	3-0350-21,22	(Nov-76)	4-0416-1,2	(Dec-78)
I-IV-33,34	(Nov-76)	3-0350-23,24	(Dec-78)	4-0416-3,4	(Dec-78)
I-IV-35,36	(Nov-76)	3-0360-1,2	(Nov-76)	4-0416-5,6	(Jan-80)
I-V-1,2	(Jan-80)	3-0360-3,4	(Nov-76)	4-0416-7,8	(Dec-78)
		3-0360-5,6	(Dec-78)	4-0417-1,2	(Nov-76)
1-0110-1,2	(Nov-76)	3-0360-7,8	(Nov-76)	4-0417-3,4	(Dec-78)
1-0110-3,4	(Nov-76)	3-0360-9,10	(Nov-76)	4-0418-1,2	(Nov-76)
1-0110-5,6	(Nov-76)	3-0399-1,2	(Nov-76)	4-0419-1,2	(Nov-76)
1-0199-1,2	(Nov-76)	3-0399-3,4	(Nov-76)	4-0420-1,2	(Nov-76)
		3-0399-5,6	(Nov-76)	4-0421-1,2	(Nov-76)
2-0201-1,2	(Nov-76)	3-0399-7,8	(Nov-76)	4-0422-1,2	(Nov-76)
2-0201-3,4	(Nov-76)			4-0422-3,4	(Nov-76)
				4-0422-5,6	(Nov-76)
				4-0422-7,8	(Nov-76)
				4-0422-9,10	(Nov-76)

I Vertical lines indicate pages included in this revision.

*Remove these pages.

Page	Date Line	Page	Date Line	Page	Date Line
4-0433-1,2	(Jan-80)	9-0930-1,2	(Jan-80)	16-1699-1,2	(Dec-78)
4-0499-1,2	(Jan-80)	9-0930-3,4	(Jan-80)	16-1699-3,4	(Dec-78)
4-0499-3,4	(Nov-76)	9-0930-5,6	(Nov-76)	16-1699-5,6	(Dec-78)
4-0499-5,6	(Nov-76)	9-0960-1,2	(Nov-76)	16-1699-7,8	(Dec-78)
4-0499-7,8	(Nov-76)	9-0960-3,4	(Jan-80)		
4-0499-9,10	(Jan-80)	9-0960-5,6	(Jan-80)	17-1740-1,2	(Nov-76)
4-0499-11,12	(Nov-76)	9-0960-7,8	(Jan-80)	17-1740-3,4	(Nov-76)
4-0499-13,14	(Jan-80)	9-0960-9,10	(Jan-80)	17-1740-5,6	(Nov-76)
4-0499-15,16	(Jan-80)	9-0960-11,12	(Jan-80)	17-1740-7,8	(Nov-76)
4-0499-17,18	(Jan-80)	9-0960-13,14	(Jan-80)	17-1746-1,2	(Nov-76)
4-0499-19,20	(Jan-80)	9-0960-15,16	(Jan-80)	17-1799-1,2	(Nov-76)
4-0499-21,22	(Jan-80)	9-0960-17,18	(Jan-80)		
4-0499-23,24	(Dec-78)	9-0960-19,20	(Jan-80)	18-1807-1,2	(Jan-80)
4-0499-25,26	(Dec-78)	9-0960-21,22	(Jan-80)	18-1807-3,4	(Nov-76)
4-0499-27,28	(Jan-80)	9-0999-1,2	(Dec-78)	18-1807-5,6	(Nov-76)
4-0499-29,30	(Jan-80)	9-0999-3,4	(Dec-78)	18-1810-1,2	(Jan-80)
4-0499-31,32	(Jan-80)	9-0999-5,6	(Jan-80)	18-1810-3,4	(Nov-76)
4-0499-33,34	(Jan-80)	9-0999-7,8	(Jan-80)	18-1810-5,6	(Nov-76)
4-0499-35,36	(Jan-80)			18-1810-7,8	(Nov-76)
4-0499-37,38	(Jan-80)	10-1011-1,2	(Nov-76)	18-1810-9,10	(Nov-76)
4-0499-39,40	(Jan-80)	10-1011-3,4	(Nov-76)	18-1810-11,12	(Nov-76)
4-0499-41,42	(Jan-80)	10-1060-1,2	(Nov-76)	18-1821-1,2	(Nov-76)
4-0499-43,44	(Jan-80)	10-1060-3,4	(Dec-78)	18-1821-3,4	(Nov-76)
		10-1060-5,6	(Jan-80)	18-1822-1,2	(Nov-76)
		10-1099-1,2	(Jan-80)	18-1830-1,2	(Nov-76)
5-0505-1,2	(Nov-76)			18-1830-3,4	(Jan-80)
5-0505-3,4	(Nov-76)	11-1111-1,2	(Nov-76)	18-1830-5,6	(Jan-80)
5-0510-1,2	(Nov-76)	11-1111-3,4	(Nov-76)	18-1830-7,8	(Jan-80)
5-0510-3,4	(Nov-76)	11-1115-1,2	(Nov-76)	18-1830-9,10	(Jan-80)
5-0515-1,2	(Nov-76)	11-1199-1,2	(Nov-76)	18-1830-11,12	(Jan-80)
5-0520-1,2	(Nov-76)			18-1830-13,14	(Jan-80)
5-0530-1,2	(Nov-76)	16-1671-1,2	(Dec-78)	18-1830-15,16	(Jan-80)
5-0540-1,2	(Nov-76)	16-1671-3,4	(Nov-76)	18-1830-17,18	(Jan-80)
5-0560-1,2	(Nov-76)	16-1671-5,6	(Nov-76)	18-1830-19,20	(Jan-80)
5-0560-3,4	(Nov-76)	16-1671-7,8	(Nov-76)	18-1830-21,22	(Jan-80)
5-0599-1,2	(Nov-76)	16-1672-1,2	(Jan-80)	18-1830-23,24	(Jan-80)
5-0599-3,4	(Nov-76)	16-1672-3,4	(Nov-76)	18-1830-25,26	(Jan-80)
		16-1672-5,6	(Nov-76)	18-1830-27,28	(Jan-80)
		16-1672-7,8	(Jan-80)	18-1899-1,2	(Nov-76)
6-0641-1,2	(Jan-80)	16-1672-9,10	(Dec-78)	18-1899-3,4	(Jan-80)
6-0641-3,4	(Dec-78)	16-1672-11,12	(Dec-78)	18-1899-5,6	(Jan-80)
6-0641-5,6	(Jan-80)	16-1672-13,14	(Dec-78)		
6-0641-7,8	(Jan-80)	16-1672-15,16	(Dec-78)	19-1910-1,2	(Nov-76)
6-0641-9,10	(Jan-80)	16-1672-17,18	(Dec-78)	19-1910-3,4	(Nov-76)
6-0651-1,2	(Nov-76)	16-1672-19,20	(Dec-78)	19-1910-5,6	(Nov-76)
6-0651-3,4	(Jan-80)	16-1672-21,22	(Dec-78)	19-1921-1,2	(Nov-76)
6-0651-5,6	(Jan-80)	16-1673-1,2	(Nov-76)	19-1927-1,2	(Nov-76)
6-0651-7,8	(Nov-76)	16-1674-1,2	(Nov-76)		
6-0651-9,10	(Nov-76)	16-1674-3,4	(Jan-80)	20-2002-1,2	(Nov-76)
6-0651-11,12	(Nov-76)	16-1675-1,2	(Nov-76)	20-2002-3,4	(Nov-76)
6-0651-13,14	(Jan-80)	16-1676-1,2	(Nov-76)	20-2004-1,2	(Nov-76)
6-0699-1,2	(Jan-80)	16-1676-3,4	(Jan-80)	20-2006-1,2	(Nov-76)
6-0699-3,4	(Jan-80)	16-1676-5,6	(Dec-78)		
6-0699-5,6	(Jan-80)				

I Vertical lines indicate pages included in this revision.

Litho in U.S.A.

Page	Date Line	Page	Date Line	Page	Date Line
21-2160-1,2	(Nov-76)	90-9005-1,2	(Dec-78)	90-9025-21,22	(Dec-78)
21-2160-3,4	(Jan-80)	90-9005-3,4	(Nov-76)	90-9025-23,24	(Nov-76)
21-2160-5,6	(Jan-80)	90-9010-1,2	(Dec-78)	90-9025-25,26	(Jan-80)
21-2160-7,8	(Jan-80)	90-9010-3,4	(Nov-76)	90-9025-27,28	(Nov-76)
21-2199-1,2	(Nov-76)	90-9010-5,6	(Dec-78)	90-9025-29,30	(Nov-76)
21-2199-3,4	(Nov-76)	90-9010-7,8	(Nov-76)	90-9025-31,32	(Nov-76)
21-2199-5,6	(Nov-76)	90-9010-9,10	(Jan-80)	90-9025-33,34	(Dec-78)
21-2199-7,8	(Jan-80)	90-9010-11,12	(Jan-80)	90-9025-35,36	(Dec-78)
21-2199-9,10	(Jan-80)	90-9010-13,14	(Jan-80)	90-9025A-1,2	(Nov-76)
		90-9010-15,16	(Jan-80)	90-9025A-3,4	(Nov-76)
31-3102-1,2	(Nov-76)	90-9015-1,2	(Jan-80)	90-9025A-5,6	(Nov-76)
31-3102-3,4	(Nov-76)	90-9015-3,4	(Dec-78)	90-9025A-7,8	(Nov-76)
31-3102-5,6	(Nov-76)	90-9015-5,6	(Dec-78)	90-9025A-9,10	(Nov-76)
31-3102-7,8	(Nov-76)	90-9015-7,8	(Jan-80)	90-9025A-11,12	(Dec-78)
31-3115-1,2	(Nov-76)	90-9015-9,10	(Jan-80)	90-9025A-13,14	(Nov-76)
31-3115-3,4	(Nov-76)	90-9015-11,12	(Jan-80)	90-9025A-15,16	(Dec-78)
31-3140-1,2	(Nov-76)	90-9015-13,14	(Jan-80)	90-9025A-17,18	(Nov-76)
31-3140-3,4	(Jan-80)	90-9015-15,16	(Jan-80)	90-9025A-19,20	(Nov-76)
31-3140-5,6	(Jan-80)	90-9015-17,18	(Jan-80)	90-9025A-21,22	(Jan-80)
31-3140-7,8	(Jan-80)	90-9015-19,20	(Jan-80)	90-9025A-23,24	(Dec-78)
31-3160-1,2	(Jan-80)	90-9015-21,22	(Jan-80)	90-9025A-25,26	(Dec-78)
31-3160-3,4	(Jan-80)	90-9015-23,24	(Jan-80)	90-9025A-27,28	(Dec-78)
31-3160-5,6	(Jan-80)	90-9015-25,26	(Jan-80)	90-9030-1,2	(Nov-76)
31-3160-7,8	(Nov-76)	90-9015-27,28	(Jan-80)	90-9031-1,2	(Dec-78)
31-3160-9,10	(Nov-76)	90-9015-29,30	(Jan-80)	90-9031-3,4	(Dec-78)
31-3160-11,12	(Dec-78)	90-9015-31,32	(Jan-80)	90-9031-5,6	(Dec-78)
31-3160-13,14	(Jan-80)	90-9015-33,34	(Jan-80)	90-9031-7,8	(Dec-78)
31-3160-15,16	(Jan-80)	90-9015-35,36	(Jan-80)	90-9031-9,10	(Dec-78)
31-3160-17,18	(Jan-80)	90-9015-37,38	(Jan-80)	90-9031-11,12	(Dec-78)
31-3160-19,20	(Jan-80)	90-9015-39,40	(Jan-80)	90-9031-13,14	(Jan-80)
31-3160-21,22	(Jan-80)	90-9015-41,42	(Jan-80)	90-9031-15,16	(Jan-80)
31-3199-1,2	(Jan-80)	90-9015-43,44	(Jan-80)	90-9031-17,18	(Jan-80)
31-3199-3,4	(Jan-80)	90-9015-45,46	(Jan-80)	90-9031-19,20	(Jan-80)
31-3199-5,6	(Jan-80)	90-9015-47,48	(Jan-80)	90-9031-21,22	(Jan-80)
31-3199-7,8	(Jan-80)	90-9015-49,50	(Jan-80)	90-9035-1,2	(Jan-80)
		90-9020-1,2	(Nov-76)	90-9035-3,4	(Nov-76)
33-3301-1,2	(Nov-76)	90-9020-3,4	(Nov-76)	90-9035-5,6	(Nov-76)
33-3301-3,4	(Nov-76)	90-9020-5,6	(Nov-76)	90-9035-7,8	(Dec-78)
33-3302-1,2	(Nov-76)	90-9020-7,8	(Nov-76)	90-9035-9,10	(Dec-78)
33-3315-1,2	(Nov-76)	90-9020-9,10	(Nov-76)	90-9035-11,12	(Dec-78)
33-3321-1,2	(Nov-76)	90-9020-11,12	(Jan-80)	90-9035-13,14	(Jan-80)
33-3340-1,2	(Nov-76)	90-9020-13,14	(Nov-76)	90-9035-15,16	(Dec-78)
33-3340-3,4	(Nov-76)	90-9020-15,16	(Nov-76)	90-9035-17,18	(Dec-78)
33-3360-1,2	(Nov-76)	90-9025-1,2	(Nov-76)	90-9035-19,20	(Dec-78)
33-3360-3,4	(Nov-76)	90-9025-3,4	(Nov-76)	90-9035-21,22	(Jan-80)
33-3360-5,6	(Nov-76)	90-9025-5,6	(Nov-76)		
33-3360-7,8	(Dec-78)	90-9025-7,8	(Nov-76)		
33-3360-9,10	(Dec-78)	90-9025-9,10	(Nov-76)		
33-3360-11,12	(Dec-78)	90-9025-11,12	(Nov-76)		
33-3360-13,14	(Dec-78)	90-9025-13,14	(Nov-76)		
33-3399-1,2	(Nov-76)	90-9025-15,16	(Nov-76)		
33-3399-3,4	(Nov-76)	90-9025-17,18	(Nov-76)		
33-3399-5,6	(Nov-76)	90-9025-19,20	(Nov-76)		

| Vertical lines indicate pages included in this revision.

Please click here and go
back to our website.

BUY NOW

Then Instant Download the
Complete Manual.

Thank you very much!