

9950 Cotton Picker

 


TECHNICAL MANUAL 9950 Cotton Picker

TM1349 (01Mar89) English

TM1349 (01Mar89)

LITHO IN U.S.A.
ENGLISH



Contents

9950 COTTON PICKER TECHNICAL MANUAL TM-1349 (MAR-89)

SECTION AND GROUP CONTENTS

SECTION 10—GENERAL

- Group 00—Safety
- Group 05—General Specifications
- Group 10—Predelivery, Delivery and After-Sale Services
- Group 15—Fuels and Lubricants

SECTION 20—ENGINE REPAIR

- Group 05—Remove/Install Engine
- Group 10—Remove/Install Cooling System

SECTION 30—FUEL AND AIR REPAIR

- Group 05—Remove/Install Air Intake System
- Group 10—Remove/Install Diesel Fuel System
- Group 15—Control Linkage

SECTION 40—ELECTRICAL REPAIR

- Group 04—Starter Circuit Replacement
- Group 05—Motorola Charging Circuit
- Group 06—Nippondenso Charging Circuit
- Group 10—Monitor System
- Group 15—Lights, Instruments and Accessory Circuit
- Group 20—Connector Repair

SECTION 50—POWER TRAIN REPAIR

- Group 05—Eaton Hydrostatic Drive
- Group 06—Sundstrand Hydrostatic Drive
- Group 10—Transmission
- Group 14—Remove/Install Final Drive
- Group 15—Axle
- Group 16—Differential

SECTION 60—STEERING/BRAKES REPAIR

- Group 04—Remove/Install Steering Components
- Group 05—Steering Column
- Group 06—Steering Metering Pump
- Group 07—Steering Valve
- Group 08—Steering Motor
- Group 10—Brakes
- Group 14—Remove/Install Brake Accumulator
- Group 15—Brake Accumulator Repair

SECTION 70—HYDRAULIC REPAIR

- Group 05—Reservoir
- Group 10—Hydraulic Pump—22.6 cm³ (1.38 cu. in.)
- Group 11—Hydraulic Pump—40 cm³ (2.4 cu. in.)
- Group 15—Main Control Valve
- Group 20—Hydraulic Cylinders
- Group 25—Hydraulic Motors
- Group 30—Height Control
- Group 35—Pressure Control Valve (S.N. -4000)
- Group 40—Basket Compactor/Conveyor Control Valve

SECTION 80—AXLES AND WHEEL REPAIR

- Group 05—Guide Axle
- Group 10—Drive Wheel

SECTION 90—OPERATOR STATION REPAIR

- Group 05—Air Conditioning System
- Group 06—Air Conditioning System Service
- Group 10—Air Intake (Pressurizer) System
- Group 15—Heating System
- Group 20—Seat
- Group 25—Miscellaneous

SECTION 100—PICKING UNIT REPAIR

- Group 05—Picking Units Removal/Installation
- Group 10—Grid Bars and Pressure Plates
- Group 15—Spindles and Picker Bars
- Group 20—Picker Drums, Drive Shafts and Gears
- Group 25—Idler Gears and Bearings
- Group 30—Doffers
- Group 35—Moistener Column
- Group 40—Gear Cases, Universal Joints and Countershafts
- Group 45—Picking Unit Cabinets and Cam Tracks

SECTION 110—PICKING UNIT LUBRICATION SYSTEM REPAIR

- Group 05—Lubrication System
- Group 10—Transfer Pump

SECTION 120—WATER SYSTEM REPAIR

- Group 05—Water System

SECTION AND GROUP CONTENTS—Continued

SECTION 130—AIR SYSTEM REPAIR

Group 05—Air System

SECTION 140—BASKET UNLOADING AND ME- TERING SYSTEM REPAIR

Group 05—Basket Unloading System

SECTION 199—SPECIAL TOOLS

Group 05—Picking Unit Repair Tools

Group 10—Fabricated Tools

SECTION 230—FUEL/AIR OPERATION AND TESTS

Group 05—Air Intake System

Group 10—Diesel Fuel System

SECTION 240—ELECTRICAL OPERATION AND TESTS

Group 05—System Operational Checks

Group 10—Electrical Diagnosis

Group 15—Electrical System Checks

Group 20—Electrical System Adjustments

Group 25—Electrical System Diagrams

SECTION 250—POWER TRAIN OPERATION AND TESTS

Group 05—Eaton Hydrostatic Drive System

Group 06—Sundstrand Hydrostatic Drive System

Group 10—Transmission

Group 15—Axle and Differential

SECTION 260—STEERING/BRAKES OPERATION AND TESTS

Group 05—Steering

Group 10—Brakes

SECTION 270—HYDRAULIC OPERATION AND TESTS

Group 05—Hydraulic System

Group 10—Hydraulic Pump

Group 15—Main Control Valve

Group 20—Hydraulic Cylinders

Group 25—Hydraulic Motors

Group 30—Height Control

Group 35—Pressure Control Valve

Group 40—Basket Compactor/Conveyor Control Valve

SECTION 290—OPERATOR STATION OPERATION AND TESTS

Group 05—Air Conditioning System Operation

Group 10—Air Conditioning System Diagnosis and Tests

Group 15—Air Intake (Pressurizer) System

Group 20—Heating System

SECTION 300—PICKING UNIT OPERATION AND TESTS

Group 05—Picking Unit System

SECTION 310—PICKING UNIT LUBRICATION SYS- TEM OPERATION AND TESTS

Group 05—Lubrication System

SECTION 320—WATER SYSTEM OPERATION AND TESTS

Group 05—Water System

SECTION 330—AIR SYSTEM OPERATION AND TESTS

Group 05—Air System

SECTION 399—SPECIAL TOOLS

Group 05—Purchased Tools

Section 10 GENERAL

CONTENTS

	Page		Page
GROUP 00—Safety	10-00-1	Install Basket Lid Parts	
		305 mm (12 in.) Extension	10-10-48
GROUP 05—General Specifications		610 mm (24 in.) Extension	10-10-52
Specifications	10-05-1	Install Basket Lid On Conveyor Basket . .	10-10-52
Dimensions	10-05-4	Connect Basket Lift Lever	10-10-54
Serial Numbers	10-05-6	Install Mud Scrapers	10-10-55
		Final Assembly Checks	10-10-55
GROUP 10—Predelivery, Delivery and After-Sale Services		Check Monitor System (Truck Shipment Only)	10-10-55
Changing Row Spacing	10-10-1	Monitor System Bulb Check	10-10-56
Install Outer Picking Units (Truck Shipment Only)	10-10-1	Drum Rotation Monitor Check	10-10-56
Attach Stalklifters	10-10-9	Adjust Fan Switch	10-10-58
Install Water Pump Belt	10-10-10	Adjust Unit Door Switches	10-10-59
Install Lid on Standard Basket Without Extension	10-10-11	Operator's Platform Controls and Instruments	10-10-63
Install Lid Lift Linkage on Standard Basket	10-10-13	Monitor Display Panel	10-10-64
Remove Lid to Install Basket Extension .	10-10-13	Indicators, Gauges and Switches	10-10-64
Install Standard Basket Extension	10-10-15	Cab Roof Controls	10-10-65
Install Lid on Standard Basket With Extensions	10-10-19	Run-In Engine and Picking Units	10-10-66
Install Upper Door on Standard Extension	10-10-21	Adjust Picking Units	10-10-67
Add Liquid Ballast to R.H. Drive Tire (Non-Conveyor)	10-10-24	Check Machine Appearance	10-10-67
Fold-Out and Install Conveyor Parts On Baskets	10-10-25	Temporary Storage	10-10-69
Assemble and Install Conveyor Chains . .	10-10-31	Dealer Predelivery Service	10-10-70
Assemble and Install Upper Conveyor Drive Parts	10-10-31	Delivery Service After-Sale Inspection . .	10-10-71
Install Basket Extension and Conveyor Fillers	10-10-34	GROUP 15—Fuels and Lubricants	
Assemble and Install Metering Bar, Chain and Shield		Fuel	10-15-1
305 mm (12 in.) Extension	10-10-40	Engine Oil	10-15-2
610 mm (24 in.) Extension	10-10-44	Engine Coolant	10-15-3
Adjust Conveyor Unloading Chains	10-10-46	Transmission—Hydraulic Oils	10-15-6
Install Duct Ladder Extension	10-10-48	Picker Bar and Spindle Lubricants	10-15-6
		Grease	10-15-7
		Lubrication	10-15-8

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



AB6;TS227 053;FLAME 050188

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).




AB6;TS204 053;SPARKS 280688

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

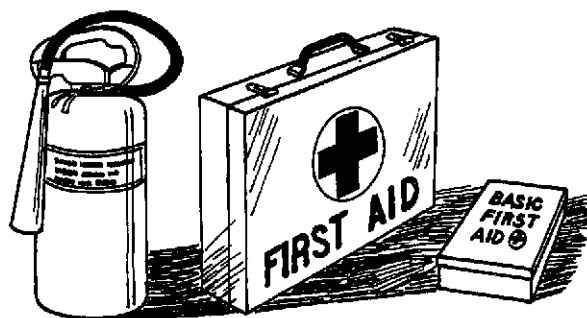

AB6;TS186 053;FIRE2 080785

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10-15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

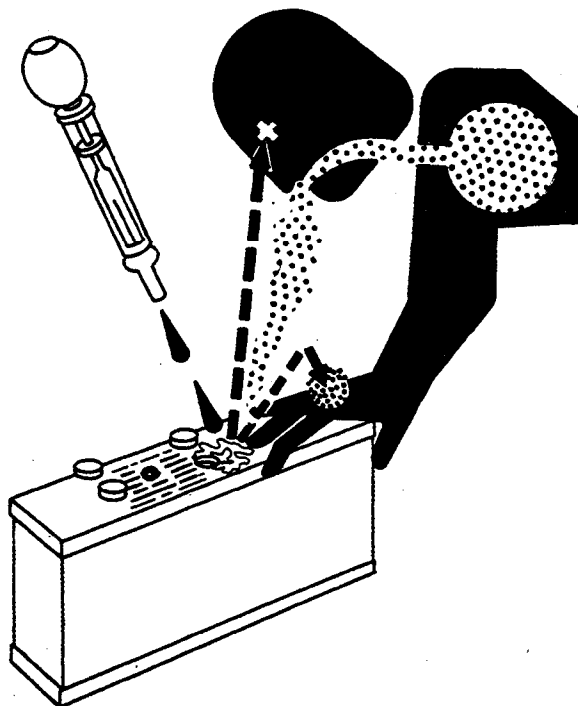

AB6;TS203 053;POISON 211287

AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before unhooking hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard to search for leaks.


If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result.



AB6;X9811 053;FLUID 180987

AVOID CONTACT WITH ENGAGED PICKING UNIT

If service is required with engaged picking units, avoid contact with moving parts. Moving parts can puncture or dismember body parts, or cause death.

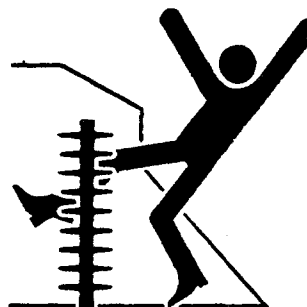

068;N39613 N01;1000K -080289

